

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Item	Description	Setting (default setting at left)
Wireless remote control	Wireless remote control function	Enable/Disable
	Door unlock function	One push unlocks the driver's door, second push unlocks passenger's door/ Ask your Lexus dealer
	Operation indicator buzzer	Enable/Disable
	Operation indicator buzzer volume	Ask your Lexus dealer
	Open door warning function	Enable/Disable
	Automatic door locking function (if a door is not opened after being unlocked)	Enable/Disable 60 seconds/Ask your Lexus dealer
	Trunk unlock function	Push for about 1 second/ Ask your Lexus dealer
	Lock/Unlock turn signal light confirmation	Enable/Disable
Door lock	Unlock function	One turn unlocks the driver's door, second turn unlocks passenger's door/ Ask your Lexus dealer
	Speed-detecting automatic door lock function	Disable/Enable
	Opening driver's door unlocks all doors	Disable/Enable
	Shift the shift lever to "P" unlocks all doors	Enable/Disable
	Shift the shift lever to position other than "P" locks all doors	Enable/Disable
Power windows	Integrated door key operation	Enable/Disable
	Wireless remote control integrated operation	Open/Disable
Alarm	Wireless remote control theft deterrent buzzer	Enable/Disable

Item	Description	Setting (default setting at left)
Headlights ("AUTO" mode)	Ambient light sensor sensitivity	Ask your Lexus dealer
	Time period before lights turn off	30 seconds/Ask your Lexus dealer
Windshield wiper operation	Automatic shift from LO speed to intermittent when the vehicle is stopped	Enable/Disable
	Automatic wipe during mist operation	Enable/ Disable
Steering column	Automatic tilt-away function	Enable/ Disable
Illumination	Time elapsed before lights turn off	15 seconds/Ask your Lexus dealer
	Operation after the engine switch is turned OFF	Enable/Disable
	Outer foot lights	15 seconds/Ask your Lexus dealer



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

n U.S. OWNERS

1 In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

1 In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

n CANADIAN OWNERS

1 In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

1 The U.S. mainland: www.lexus.com

1 Hawaii: www.servcolexus.com

1 Canada: www.lexus.ca

©2009 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.